

Table of Contents

Set Up Your Samsung Jack™	6
What's in the Box?	6
Insert the SIM Card	6
Insert microSD™ Card	7
Insert Battery	7
Charge Battery	7
Get to Know Your Samsung Jack™	8
Turn On/Off Your Device	8
Lock/Unlock Your Device Keyboard	8
Check Your Wireless AT&T Connection	9
Status indicators	9
Learn to Navigate the Screen	10
Home Screen	10
Turbo Scroll	10
Using the Keyboard	11
Use the Phone	12
Make a Call	12
Answer a Call	12
Set Up Voicemail	13
Check Voicemail	13



Table of Contents

Manage Contacts	14
Add a Contact	14
Save a Recently Called Number to Contacts	15
Copy Contacts from a SIM Card	15
Manage Appointments	16
Schedule an Appointment	16
Personalize Your Device	17
Change Your Ringtone	17
Use Text/Multimedia Messaging	18
Send a Text/Multimedia Message	18
Receive and Reply to a Text Message	19
Use the Camera	20
Take & Send a Picture	20
Take & Send a Video	21
Make a Call Using Video Share	22
Browse the Web & Shop Online	24
Go to Web Pages	24
Save Web Page to Favorites	25



Table of Contents

Set Up Your Email	26
Choose the Best Email Option for You	26
Personal Email Setup With Xpress Mail	27
Send and Receive Personal Email	29
Set Up Self-Service Corporate Email with Xpress Mail™	30
IT Managed Corporate Email	30
Set Up Bluetooth®	31
Set Up AT&T Navigator	32
AT&T Navigator	32
Login Instructions	32
Get Directions	32
Wi-Fi	33
About Wi-Fi Networks	33
Turn Wi-Fi On/Off	33
Connect to an Available Wi-Fi Network	34
Listen to Music & Watch TV & Video	35
Transfer Music & Video to Your Device	35
Play Music	36
Additional Services	37
Troubleshooting	38
Tips & Tricks	42



Set Up Your Samsung Jack™

What's in the Box?

To get started, we recommend the following:

- Carefully follow the step-by-step instructions in this guide to set up your device.
- Review the User Manual (by clicking the proper link) on the Getting Started CD to learn about the full power of the Samsung Jack™.

Take note of the following components included in the box:



Samsung Jack™



Getting Started
CD



Charger



Lithium Ion
Battery



USB Cable



Insert the SIM Card

1. Remove the battery cover then remove battery.
2. Slide SIM face up (gold contacts face down) into SIM slot.
3. Replace battery and battery cover.



Set Up Your Samsung Jack™

Insert microSD™ Card

A microSD Card is a removable memory card that will increase data storage capacity of the device.

1. Remove the battery cover then remove battery.
2. Slide the narrow end of the microSD™ Card into the slot marked **microSD**, with gold contacts facing down,
3. Replace battery and battery cover.

Note: microSD™ Card sold separately.

Insert Battery

1. Remove the battery cover.
2. Align the contacts on the battery with the contacts on the back of the device.
3. Push the battery down until it locks into place.
4. Replace the battery cover.

Charge Battery

1. Plug the charger into a standard AC wall outlet.
2. Plug the charger into the jack on the right side of the phone. The indicator light on the front upper right of device is red while charging, and green when fully charged.

Note: When charging is complete, unplug the charger from the power outlet.



Get to Know Your Samsung Jack™

Turn On/Off Your Device

Press and hold the **POWER** button located on the top left side of the device.

Lock/Unlock Your Device Keyboard

To lock the device and avoid unintentional key presses, press and hold the **END** key. To unlock the device, short press the **POWER** button, then press the **LEFT SOFT** key to **Unlock**, followed by the * key.

Backlight

In the unlock mode, after 30 seconds the screen will dim to save battery power. To turn your screen on, short press the **POWER** button.





POWER
button



Get to Know Your Samsung Jack™






 



Check Your Wireless AT&T Connection

On the top right corner of the **Home** screen, you will find the network coverage indicator.

-  Full wireless 3G data coverage
-  Full wireless coverage (no data connection)
-  No wireless coverage
-  Wireless is turned off



Status indicators

- | | | |
|--|---|---|
|  Battery full |  Bluetooth on |  New Email message |
|  Battery empty |  3G network |  New voice mail |
|  Battery charging |  Signal strength |  Wi-Fi on |

Tip: The **Quick List** displays a list of commands, such as turning off your phone, locking the keyboard of your phone, turning on/off wireless, and turning it to silent. To access the **Quick List**, short press the **POWER** button located on the top left side of your device.



Get to Know Your Samsung Jack™

Learn to Navigate the Screen

To move around the screen, press the **NAVIGATION** key up, down, left or right. Press the **CENTER NAVIGATION** key to select.

To select the bottom left and right items on the screen, use the **LEFT** and **RIGHT SOFT** keys.

Home Screen

The **Home** screen displays important information, such as upcoming appointments, status indicators, the current date, time, and profile. Access communication tools, your calendar, AT&T services, your Music, photos and settings from the **Home** screen. Use the **NAVIGATION** key to scroll up, down, and left or right to the desired service or application.

Turbo Scroll

Turbo Scroll is a new and exciting Samsung feature that saves time and keystrokes. By using the navigation keys, you can press lightly to scroll through text on a page, or press a bit harder to scroll quickly through entire pages!



Get to Know Your Samsung Jack™

Using the Keyboard

Your Samsung Jack™ is equipped with an innovative keyboard that allows you to easily and accurately type words. When you select a field that requires text or numbers, the phone automatically selects the appropriate input mode. However, if you need to switch between modes, press one of the keys listed in the following illustration. See the indicator at the top of the screen to identify the current text mode setting.

Creating Text

To enter a number or symbol, press the **FUNCTION** key, and then press the corresponding key. To enter all numbers or symbols, press the **FUNCTION** key twice.

To type a single uppercase letter, press the **SHIFT** key, and then press the corresponding key. To enter all CAPS, press the **SHIFT** key twice.

Task Keys

MEdia™ Net – direct access to MEdia™ Net. See Getting Started CD for details.

GPS – direct access to GPS. See page 31 for details.

SYMBOL/SPACE – short press inserts a space/long press brings up additional symbols.

SILENT – turn ringtone on or off.




CAMERA – short press activates camera/long press activates screen Zoom mode - for a full description of camera features see page 20.

MESSAGING – direct access to email and text messaging. See page 18 for details.




Use the Phone

Make a Call 1 minute

1. From the **Home** screen, press the **SEND** key  to access the phone screen. Or enter the phone number by using the numeric keys on the keyboard.
2. Press the **SEND** key . The indicator light will blink red signalling an outgoing call.
3. To end the call, press the **END** key .

Note: To activate speakerphone, press and hold the **SEND** key for 2 seconds. To place a call on hold or unhold, press quickly on the **SEND** key.

Answer a Call 1 minute

1. Press the **SEND** key . The indicator light will blink red signalling an incoming call.



Use the Phone

Set Up Voicemail 2 minutes

1. Press and hold the **1** key on your Samsung Jack™ to connect to the AT&T voicemail system.
2. Follow the voice prompts to create a password and record your name and greeting.

Check Voicemail 1 minute

1. Press and hold the **1** key.
2. Follow the voice prompts.




Manage Contacts

Add a Contact 3 minutes

1. On the **Home** screen, press the **RIGHT SOFT** key to enter the **Contacts** menu.
2. Press the **LEFT SOFT** key to select **New**.
3. To save information to your SIM card, select **SIM Contact**.
To save information to the device memory, select **Outlook Contact**.

Note: **SIM Contact** stores the number on your device and you can only add one number per entry. **Outlook Contact** syncs to your email. You can add multiple numbers per entry on Outlook.

4. Type the contact information.
5. Press the **LEFT SOFT** key to select **Done**.

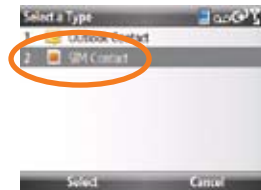

Manage Contacts


Save a Recently Called Number to Contacts 3 minutes

1. Press the **SEND** key.
2. Highlight the number from the list and press the **CENTER NAVIGATION** key to select. Recent calls will be at the top.
3. Press the **LEFT SOFT** key to **Save**.
4. Press the **LEFT SOFT** key to **Select**.
5. To save contact information, select **Outlook Contact** or **SIM Contact**.
6. Type the contact information.
7. Press the **LEFT SOFT** key to **Save**.



Copy Contacts from a SIM Card 2 minutes

1. On the **Home** screen, press the **RIGHT SOFT** key to enter the **Contact** menu.
2. Press the **RIGHT SOFT** key to enter the **Menu**.
3. Highlight **Select Contacts** and press the **CENTER NAVIGATION** key.
4. Highlight **All** and press the **CENTER NAVIGATION** key.
5. Press the **RIGHT SOFT** key to enter the **Menu**.
6. Highlight **Copy Contact** and press the **CENTER NAVIGATION** key.
7. Highlight **To Contacts** and press the **CENTER NAVIGATION** key.

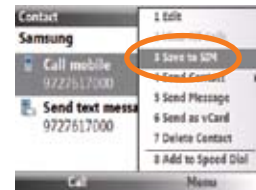

Manage Appointments

Schedule an Appointment 4 minutes

1. On the **Home** screen, press the **LEFT SOFT** key to enter the **Start** menu.
2. Highlight **Calendar** and press the **CENTER NAVIGATION** key.
3. Press the **RIGHT SOFT** key to enter the **Menu**.
4. Highlight **New Appointment** and press the **CENTER NAVIGATION** key.
5. Type the appointment information.
6. Press the **LEFT SOFT** key to select **Done**.

Note: Use the number keys to enter the date and time. You do not need to use the FN key to enter numbers in these fields. To change the calendar views, press the **LEFT SOFT** key.



Personalize Your Device

Change Your Ringtone 2 minutes

1. On the **Home** screen, press the **LEFT SOFT** key to enter the **Start** menu.
2. Highlight **Settings** and press the **CENTER NAVIGATION** key.
3. Highlight **Sounds** and press the **CENTER NAVIGATION** key.
4. Highlight **Ring Tone** and press the **CENTER NAVIGATION** key.
5. Use the **RIGHT NAVIGATION** key to find a ringtone.
6. Press the **LEFT SOFT** key to select **Done**.



Use Text/Multimedia Messaging

Send a Text/Multimedia Message 2 minutes

1. Press the **MESSAGING** key on the bottom right of the keyboard.
2. Highlight **Messages** and press the **CENTER NAVIGATION** key.
3. Press the **RIGHT SOFT** key to enter the **Menu**.
4. Highlight **New** and press the **CENTER NAVIGATION** key.
5. In the **To** field, type a phone number, or email address, or press the **CENTER NAVIGATION** key to select a contact.
6. Type a message.
7. Press the **LEFT SOFT** key to select **Send**.

Note: To add or attach an item to the message, press the **RIGHT SOFT** key to enter the **Menu**. Select **Add** or **Attach** and select the type of item to attach. Choose the desired item from the list.




Use Text/Multimedia Messaging

Receive and Reply to a Text Message 1 minute

1. Press the **MESSAGING** key on the bottom right of the keyboard.
2. Highlight **Messages** and press the **CENTER NAVIGATION** key.
3. Scroll to a message.
4. Select a message.
5. Enter your message then select **Send**.
6. To end a conversation, press the **RIGHT SOFT** key to select **Menu** and then select **Close**.

Note: The indicator light will blink pink when receiving an incoming message.

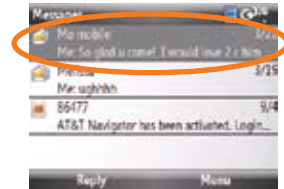

Use the Camera

Take & Send a Picture 2 minutes

1. Short press the **CAMERA** key on the bottom right of the keyboard.
2. Press the **CENTER NAVIGATION** key to take a picture. The camera may take a moment to focus before the picture is taken.
3. After the picture has been taken, press the **RIGHT SOFT** key to enter the **Menu**, and select **Send Multimedia Msg**. Press the **LEFT SOFT** key to select **Yes** to resize the image.
4. In the **To** field, type a phone number or you can select an entry in your saved contact list.
5. Type a message (optional).
6. Press the **LEFT SOFT** key to **Send**.

Note: Pictures will automatically be saved in My Stuff folder.



Use the Camera

Take & Send a Video 4 minutes

1. Short press the **CAMERA** key on the bottom right of the keyboard.
2. Press the **RIGHT SOFT** key to enter the **Menu**, highlight **Camcorder** then press the **CENTER NAVIGATION** key.
3. Press the **CENTER NAVIGATION** key to start recording.
4. Press the **RIGHT SOFT** key to stop recording. Press the **CENTER NAVIGATION** key to pause recording and press again to resume recording.
5. Press the **RIGHT SOFT** key to select **Cancel**.
6. Press the **LEFT SOFT** key to select **Save**.
7. Press the **LEFT SOFT** key to select **View**. Highlight the video you want to send.
8. Press the **RIGHT SOFT** key to enter the **Menu**, and select **Send** then **via Multimedia Msg** or **via e-mail**.
9. In the **To** field, type a phone number or the name of a saved contact (if sending via Multimedia Msg.) or an email address (if sending via email).
10. Type a message (optional).
11. Press the **LEFT SOFT** key to **Send**.

Note: When using the camera obey all laws that may restrict your use of the Samsung Jack.™



Use the Camera

Make a Call Using Video Share



Share events the moment they happen. Video Share allows you to stream one-way live or pre-recorded video while on a mobile-to-mobile voice call. Video Share is a one-way video, two-way audio connection. Only the sender is charged.

To start a Video Share call

1. Make a normal phone call.
2. Once the call is connected, if Video Share is available, each device will display **Video Share Ready**. The prompt will only appear if both parties are in 3G coverage and have a Video Share feature.
3. Press the **[update based on device]** key to enter the **Menu** then select **Video Share** to initiate the Video Share session. You will be prompted to select either live or pre-recorded video.
4. Your device will initiate the video on your side and send an invitation to the connected party to accept the video stream.

To continue talking and end the Video Share session

1. Press the **Stop** icon and continue talking. To end the voice call and the Video Share session, press the **End** key.



Use the Camera

To accept a Video Share call

1. When receiving a Video Share request, the name or number of the person initiating the call will appear on the screen with the prompt “**...wants to share video with you.**”
2. Select **Yes** and the Video Share session will begin automatically.

To end a Video Share call and continue with the phone call

1. Press the **Stop** icon and continue talking. To disconnect press the **END key** twice.

***Note:** Video Share requires a 3G SIM card and is not available in all markets. Both parties must be in a 3G service area for the duration of the Video Share session – a 3G icon must appear by the signal bars prior to a call being placed.



Browse the Web & Shop Online

Go to Web Pages 5 minutes

To browse web content using the cellular data connection or a Wi-Fi connection, use the Internet Explorer browser.


1. On the **Home** screen, press the **LEFT SOFT** key to enter the **Start** menu.
2. Highlight **Internet Explorer®** and press the **CENTER NAVIGATION** key.
3. Press the **RIGHT SOFT** key to enter the **Menu**.
4. Highlight **Address Bar** and press the **CENTER NAVIGATION** key.
5. Clear the text field that appears, then type the URL (e.g. www.att.com) that you wish to go to.
6. Press the **LEFT SOFT** key to select **Go**.

To browse MEdia Net content or to download ringtones, wallpapers or games from the AT&T Mall use the MEdia Net browser. Ensure Wi-Fi is disabled before using the MEdia Net browser.

1. On the **Home** screen, press the **LEFT SOFT** key to enter the **Start** menu.
2. Highlight **MEdia Net** and press the **CENTER NAVIGATION** key.
3. Press the **RIGHT SOFT** key to enter the **Menu**.
4. Highlight **Address Bar** and press the **CENTER NAVIGATION** key.
5. Clear the text field that appears, then type the URL (e.g. www.att.com) that you wish to go to.
6. Press the **LEFT SOFT** key to select **Go**.



Note: We have set the browser homepage to MEdia Net. MEdia Net, only from AT&T, brings your favorite web pages, downloads, and more to your wireless phone.

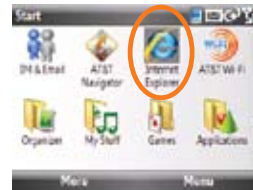


Browse the Web & Shop Online

Save Web Page to Favorites 1 minute

1. After accessing the site, press the **RIGHT SOFT** key to select **Menu**.
2. Highlight **Add to Favorites** and press the **CENTER NAVIGATION** key.
3. Scroll to the **Name** field and enter favorite name.
4. Press the **LEFT SOFT** key to **Add**.

Note: Browsing the web and shopping online uses data; data charges may apply.

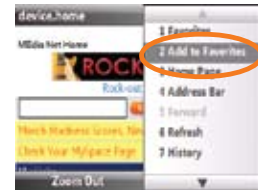

Set Up Your Email

Choose the Best Email Option for You

Your Windows Mobile smartphone can connect to:

Personal Email Accounts

Easily access your personal email such as Yahoo!, AOL or Hotmail directly from your Internet service provide (ISP) on your Windows Mobile powered PDA phone. To set up a personal email account on your Samsung Jack™, you can use Xpress Mail. Xpress Mail offers automated setup and synchronization so that changes and deletions on your smartphone also appear in your ISP email account.

Corporate Email Accounts

Corporate email enables your Windows Mobile powered smartphone to connect to corporate email accounts like Microsoft® Exchange Server or IBM Lotus Domino. These accounts are typically managed by an IT organization. To set up corporate email on your Samsung Jack™, you can use Xpress Mail™ for self-service or Microsoft Direct Push and Good Mobile Messaging for IT managed service.




Set Up Your Email

Personal Email Setup With Xpress Mail 5 minutes

Xpress Mail automates the setup process, and will work with the majority of email services such as Yahoo!® or AOL®.

1. Highlight **Get Xpress Mail** on the **Home** screen and press the **CENTER NAVIGATION** key.
2. Highlight **Install Now** and press the **CENTER NAVIGATION** key.
3. Highlight **Download Now** and press the **CENTER NAVIGATION** key. (Download time will vary depending on your service area).
4. Press the **LEFT SOFT** key to select **Yes** to continue the download. Once the download is complete, press **OK** to reset your device.

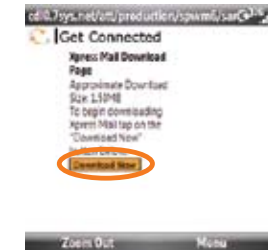


Set Up Your Email

- Press the **RIGHT SOFT** key to accept the license agreement.
- Confirm your 10-digit mobile (cell) number (numbers only) and press **Next**.
- Select **Portal or ISP** then press the **RIGHT SOFT** key to select **Next**.


Note: Using email on your device requires a data plan. If you do not have a data plan associated with your account, please visit att.com/wireless or call 1-800-331-0500.

 - Choose your provider and press **Next**. (If your provider is not listed highlight **More** then press **Next** to view an additional list of personal email providers.)

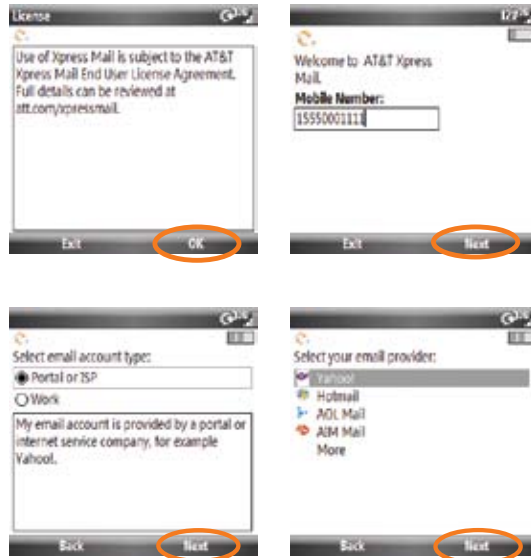

Set Up Your Email

- Enter your User Name and Password and press **Next**.
- Press **Register** and wait for the registration process to complete.
- After successfully registering, your Samsung Jack™ will display the Xpress Mail Settings page. Press **Inbox** to go to the **Messaging** section with your personal email account.

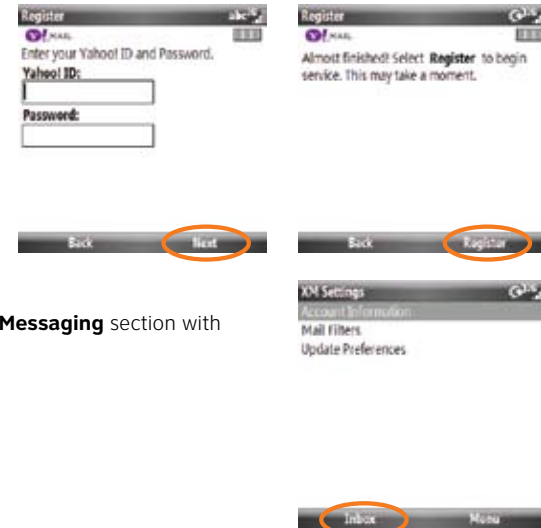

Send and Receive Personal Email 4 minutes

- Press the **MESSAGING** key in the lower right of the keyboard.
- Select **Yahoo!** (or your personal email provider).
- Press the **RIGHT SOFT** key to select **Menu** and select **New** to compose a new email.
- When you are finished composing your message select **Send**.



Set Up Your Email

Set Up Self-Service Corporate Email with Xpress Mail™

A Corporate email account (like Microsoft® Exchange or Lotus Notes) is an account managed by a company's IT organization. Xpress Mail can provide wireless access to your corporate email from your device without support from IT. Go to **xpressmailpe.wireless.att.com** to set up self-service corporate email.

IT Managed Corporate Email

To set up IT managed corporate wireless email on your smartphone, contact your IT administrator for set up instructions and support detail for Microsoft Direct Push or Good Mobile Messaging.

Microsoft Direct Push provides wireless access to your corporate email, contacts, calendar and tasks for Microsoft Exchange Server. Contact your IT administrator for set up instructions and support detail. Activate an appropriate enterprise data plan on your AT&T account before using Microsoft Direct Push.

Good Mobile Messaging provides wireless access to your corporate email, calendar, contacts, tasks and notes for Microsoft Exchange Server and Lotus Domino. Contact your IT administrator for support set up instructions and support detail. Visit get.good.com for additional download information. Activate an appropriate enterprise data plan on your AT&T account before using Good Mobile Messaging.



Set Up Bluetooth®

Set Up Bluetooth® 4 minutes

1. On the **Home** screen, short press the **POWER** button to bring up the **Quick List**.
2. Highlight **Wireless Manager** and press the **CENTER NAVIGATION** key.
3. Highlight **Bluetooth**.
4. Press the **CENTER NAVIGATION** key to turn on or off.
5. Press the **LEFT SOFT** key to select **Done**.

Connect to a Bluetooth Headset or Another Bluetooth Device

1. In the **Wireless Manager** press the **RIGHT SOFT** key to select **Menu**.
2. Highlight **Bluetooth Settings** and press the **CENTER NAVIGATION** key.
3. Highlight **Add new device...** and press the **CENTER NAVIGATION** key.
4. Select the **Bluetooth** device you wish to add.
5. If required, type the passkey for the Bluetooth enabled device on your Samsung Jack™.
6. Once the Bluetooth is paired with the Samsung Jack™ you are ready to use Bluetooth.

Note: The indicator light will blink blue when Bluetooth turns on or off.



Set Up AT&T Navigator

AT&T Navigator

AT&T Navigator helps you get around town by giving you voice-guided, turn-by-turn GPS driving directions and real-time alerts to avoid traffic incidents.

You can access 3D maps and over 10 million business listings to find nearby restaurants, ATMs, hotels and more—by category or by name—and even find the lowest-priced gas.

Login Instructions 3 minutes

1. Press the **GPS** key at the bottom left of your keyboard.
2. To complete the login process, you will be prompted to enter your mobile phone number, name and AT&T Navigator PIN.
This PIN will be sent to you via SMS once you activate service.
After entering your password, select **Go**.

Get Directions 5 minutes

1. Select the **Drive To** option and select **Go**.
2. Select the **Address** option and choose the **Type It** option.
3. Enter the address for your desired destination and select **Done**. AT&T Navigator will validate the address and generate your route.




Wi-Fi

About Wi-Fi Networks

Wi-Fi can transmit wireless access over distances of up to 300 feet (or 100 meters). To utilize Wi-Fi on your device, you will need to be within range of a wireless access point, or “hotspot.” You may be able to access the Internet and email using available work, home or other Wi-Fi networks. To browse the web over Wi-Fi use the Internet Explorer application once you have set-up your Wi-Fi connection.

Turn Wi-Fi On/Off 1 minute

1. On the **Home** screen, short press the **POWER** button to bring up the **Quick List**.
2. Highlight **Wireless Manager** and press the **CENTER NAVIGATION** key.
3. Highlight **Wi-Fi** and press the **CENTER NAVIGATION** key to turn on or off.
4. Press the **LEFT SOFT** key to select **Done**.

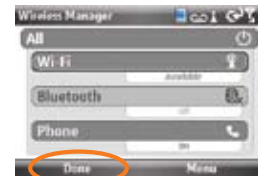

Wi-Fi

Connect to an Available Wi-Fi Network 6 minutes

1. On the **Home** screen, short press the **POWER** button to bring up the **Quick List**.
2. Highlight **Wireless Manager** and press the **CENTER NAVIGATION** key.
3. Press the **RIGHT SOFT** key to select **Menu**, highlight **Wi-Fi Settings** and press the **CENTER NAVIGATION** key.
4. Highlight the network name. Press the **CENTER NAVIGATION** key to connect.
5. Select **Next**. Select **Finish**.
6. For password protected network, follow on-screen instructions.

Note: The indicator light will blink green when WiFi turns on or off or when connecting to a network.



Listen to Music & Watch TV & Video

Transfer Music & Video to Your Device 3 minutes

To transfer music to your device, you will need:

- **Microsoft® ActiveSync®** or **Windows Mobile Device Center®** installed on your PC (to install Microsoft® ActiveSync® on your PC, see **Sync Your Device to Your PC** in the Getting Started CD).
 - **Windows Media® Player 10** (or higher) installed on your PC. You can download this at: www.microsoft.com/mediaplayer.
1. Connect your device to your PC.
 2. Close **ActiveSync®** (it will automatically open when you connect your device).
 3. Open **Windows Media® Player** on your PC.
 4. Select **Media Library**, then highlight the music you want to copy.
 5. Right-click on it, then select **Add to Playlist**.
 6. Select **Sync List** (The songs will appear in the **Sync List** pane on the right).
 7. Select **Start Sync**.





Listen to Music & Watch TV & Video

Play Music 1 minute

1. On the **Home** screen, press the **LEFT SOFT** key to enter the **Start** menu.
2. Highlight **AT&T Music** and press the **CENTER NAVIGATION** key.
3. Highlight **Windows Media®** and press the **CENTER NAVIGATION** key.
4. Highlight **My Music** and press the **CENTER NAVIGATION** key.
5. Highlight **All Music** and press the **CENTER NAVIGATION** key.
6. Select the song you wish to play.

Note: To TURN OFF the music, press the **RIGHT SOFT** key then select **Play/Pause** or **Stop**. AT&T Music uses data; data charges may apply.

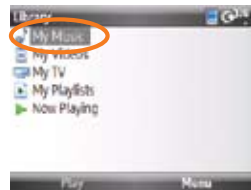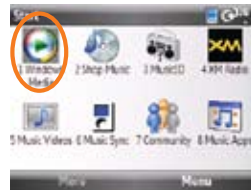

Additional Services

The following services are available for your AT&T smartphone.

- **Instant Messaging (IM)** – send IMs to your buddy list using your favorite service
- **AT&T Mobile Music** – provides the ultimate on-the-go music experience
- **AT&T Mall** – shop for games, graphics, ringtones and applications
- **XM Radio** – offers your choice of radio channels on your phone
- **CV** – watch news, sports, weather and entertainment video clips
- **MobiTV** – transforms your phone into a wireless TV
- **Mobile Banking** – check your account balances, securely transfer funds between your eligible accounts, view and pay bills, and review your transaction history. You can access multiple banks, accounts and financial services within one application. To find out if your bank supports Mobile Banking from AT&T, visit att.com/mobilebanking or contact your financial institution.

For more information about adding these services, visit your local AT&T store or call us at 1-800-331-0500.

More information about how to use these services with your smartphone is available at att.com/WirelessTutorials.



Troubleshooting

Why won't my Samsung Jack™ turn on?

The power might be off or the battery might not be charged. See Charge the Battery on page 7 for more information.

Why can I not send or receive email messages?

Your Samsung Jack™ may not be connected to the wireless network. See Connect Your Wireless AT&T Network on page 9 for more information.

Your device may not be attached to a supported email address. See Personal Email Setup on page 26 for more information.

If you still cannot send and receive messages, reset your device by removing and reinserting the battery.

Why can I not add a supported email address?

Verify that the email account attached to the email address that you want to add supports POP3 or IMAP4. Contact your email provider for more information about the address types that you can add.

Can I stream music, or buy and download tunes wirelessly - or do I need a PC?

You can stream and buy music – wherever you are – using AT&T Mobile Music. You can also transfer tunes from your PC to the Samsung Jack™ using the USB Cable.



Troubleshooting

How can I move data from another device to my Samsung Jack™?

You can share data between compatible devices via Bluetooth wireless connections, microSD cards, Mobile Device Center (Windows Vista) or Microsoft ActiveSync (Windows XP or earlier).

Can I customize the application shortcuts on the Home screen?

The shortcuts that appear on the Home screen are the most frequently used applications; they change as you use the applications and functions on your Samsung Jack™. Therefore, the applications most frequently used will appear as shortcuts. Since the shortcuts are included on the Home screen dynamically, there is no option to customize application shortcuts through usage of the Windows default Home screen layout.

How can I access the Internet on my desktop/laptop using my Samsung Jack™ as a modem?

AT&T Communication Manager is a software application that runs on your laptop, allowing you to control how and when your laptop connects to the Internet over AT&T's wireless network. Just add a Tether service plan to your account, download Communication Manager to your laptop at att.com/communicationmanager, and you'll be ready to wirelessly enable your laptop almost anywhere AT&T offers coverage. To find detailed instructions for setting up a tethering connection with your device, go to the Device Support section of the AT&T web site.



© 2009 Samsung Telecommunications America, LLC. Samsung and Samsung Jack™ are both trademarks of Samsung Electronics America, Inc. and its related entities. Other company and product names mentioned herein may be trademarks of their respective owners. Screen images simulated.

Microsoft, Windows Logo, Windows Mobile, Windows Media, ActiveSync and Outlook are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

© 2009 AT&T Intellectual Property. All rights reserved. AT&T, AT&T logo and all other marks contained herein are trademarks of AT&T Intellectual Property and/or AT&T affiliated companies.

WARNING: This product contains small parts. Keep your mobile phone and any small parts out of small children's reach. To take advantage of all the benefits and service features, you may need to purchase additional hardware or software, pay monthly access and/or per use charges. This device contains a Lithium Ion Battery. Do not dispose of as household waste. This carton is made from partially recycled paper fibers and is recyclable when local recycling programs are in place.



Tips & Tricks

Phone

TO:	DO:
Turn the speakerphone on and off during a call	Select Menu , then select Turn Speakerphone On or Turn Speakerphone Off
Change volume during a call	Press the volume button on the left side of the phone.
Change phone service settings	Select Start , then select Settings . Select Phone and select the desired phone services.
Use the phone while out of the country	Contact AT&T to enable international voice and data roaming.

Browser

TO:	DO:
View a page in full-screen mode	On a web page, select Menu , then select View , then choose Full Screen .
Change the size of the text on web pages	On a web page, select Menu , then select View , choose Zoom Level then select the size you want.

Navigating the Screen

TO:	DO:
Scroll up/down/left/right on the screen	Press the NAVIGATION key up, down, left or right.
Launch a program or select an item	Press the CENTER NAVIGATION key.